

# AKARI Light Sculptures


## Assembly Instructions

### Model: Table

- 1 Unscrew set screw from socket of cord set.
- 2 Insert wire legs through loops on bottom rim of shade.
- 3 Stretch shade into shape by pushing stretcher into upper rim of shade. Align loops on legs.
- 4 Push end of socket through loops. Secure in position with set screw.

#### Lamp wattage:

Maximum: 40 watts  
Recommended: 25 watts

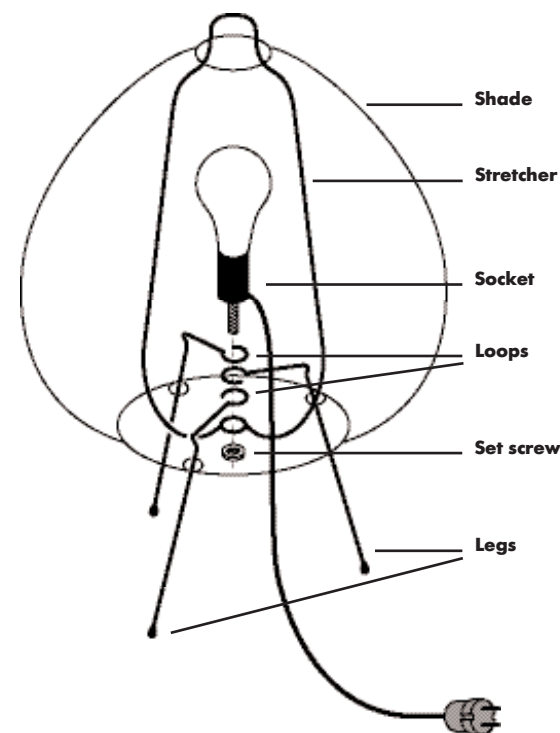


### Model: 3A, 10A, 14A

- 1 Unwrap all parts. For models 3A, 10A these should include: 3-prong fork, 3 screw-in legs, harp, shade, cord set. 14A comes with aforementioned parts + extra harp.
- 2 Screw legs into 3-prong fork.
- 3 Connect harp to 3-prong fork using cord set as shown. Tighten with locknut.
- 4 Slide shade over frame; make sure logo & signature are on bottom shade.
- 5 Secure 3-prong fork onto wood supports on bottom ring. Should fit tightly.
- 6 (Model 10A) After securing bottom ring to 3-prong fork, lift the top ring until it can be hung
- 7 (Model 14A) Connect bottom harp to 3-prong fork with threaded nipple and washers. Top harp has hanging wood crossbar, and connects to bottom harp by passing threaded nipple on bottom of cord set socket through loops on harps and fastening with locknut.

#### Lamp wattage:

Maximum: 60 watts  
Recommended: 40 watts

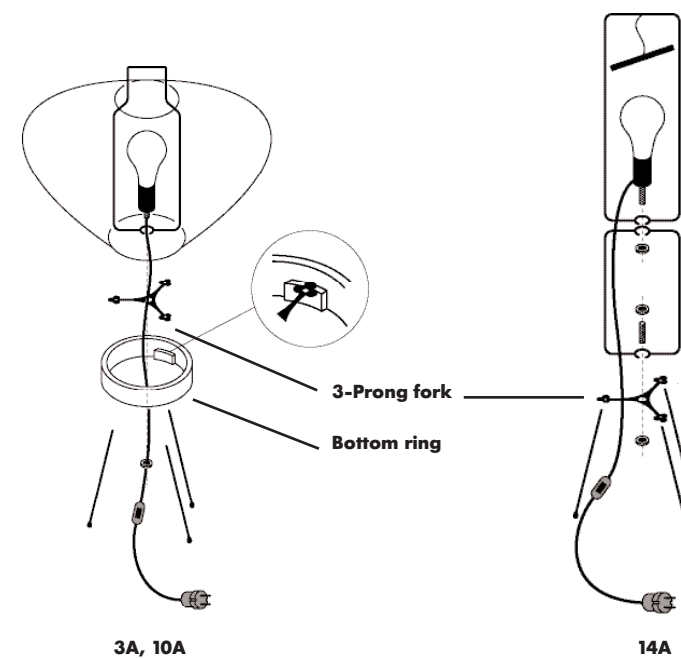


### Model: UF1, UF2, UF3

- 1 Attach legs to base plate with screws. Place assembly on flat surface and adjust legs by bending gently until all four legs rest on surface. Three legged Akari need no adjustment.
- 2 Place harp on base plate with center holes and slots aligned. Position socket over center hole and secure in place with set screw.
- 3 Screw in bulb.
- 4 Place shade over harp and tie to legs with strings that are on bottom rim of shade.

#### Lamp wattage:

Maximum: 75 watts  
Recommended: 40 watts

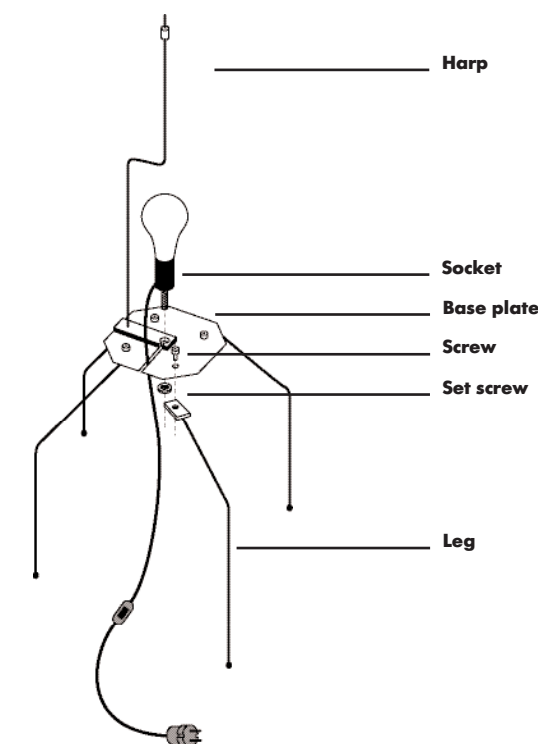

Vitra Design Museum GmbH

Charles-Eames-Str. 2  
D-79576 Weil am Rhein


www.design-museum.com  
shop@design-museum.com

## Model: BB1, BB2, BB3 stands

- 1 Unwrap all parts. Carefully remove stand from packing material.
- 2 BB3 should be placed on floor so that bamboo sections are aligned with each other. Pull electrical cord from inside cast iron base so that small bamboo section slides into larger bamboo section. Push extra cord into bottom of base.
- 3 All bamboo stands should come with a threaded extension rod designed for the particular shade ordered. The lengths are 5, 15, 23, 30 cm.
- 4 The extension rod should be screwed into the top of the harp.
- 5 Screw one of the threaded washers onto threaded extension rod, leaving approx. 1 cm of room.
- 6 Attach shade by sliding over harp & extension rod. Some shades will have a crossbar at bottom of shade. This is attached by sliding the crossbar around the bamboo pole between the rubber o-rings. This allows you to adjust the amount the shade is stretched out. Other models only have the top crossbar; this attaches at the top of the extension rod.
- 7 Secure top crossbar by screwing second threaded washer onto extension rod.
- 8 When moving stand, pick up stand from the cast iron base; not by the bamboo alone.

### Lamp wattage:

Maximum: 75 watts  
Recommended: 60 watts

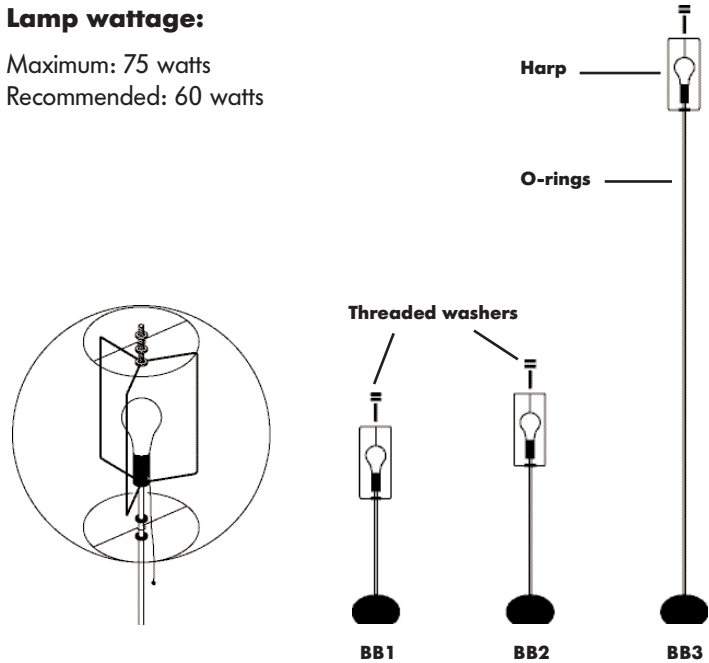


## Model: 33S / BB3 Stand

- 1 Unwrap all parts. Carefully remove stand from packing material.
- 2 The 2 horn shapes come with wire stretchers. Install wire stretcher in each, fitting ends over the inside knobs. Be careful not to tear paper or break the thin wood inner ring.
- 3 Insert horn shape on the side. The horn shape should fit so its thin inner ring is concealed completely.

### Lamp wattage:

Maximum: 75 watts  
Recommended: 60 watts

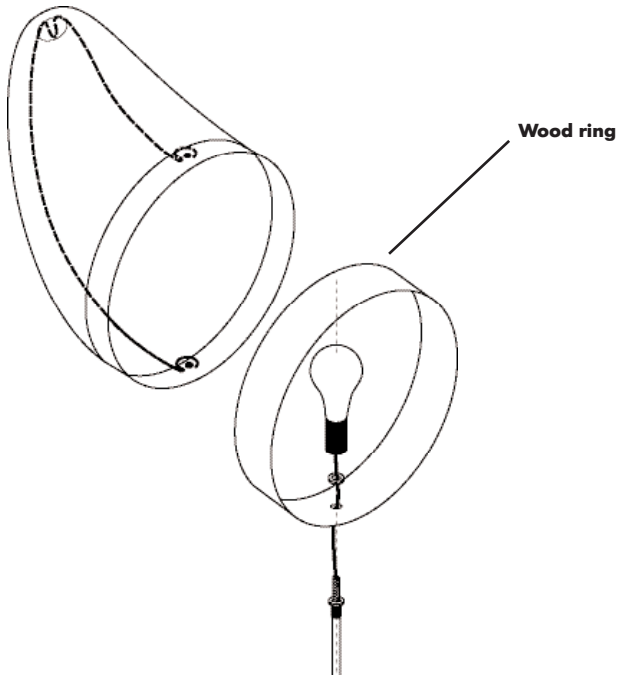


## Model: UF4

- 1 Unwrap all parts; Socket, harp stem and base plate come as an assembly with the cord set.
- 2 Attach legs to base plate with screws.
- 3 Screw extension rod to top of harp.
- 4 There are two knurled nuts on top end of extension rod. Unscrew top nut. Place shade on the extension rod and secure in place with top knurled nut.
- 5 Stretch shade and tie bottom edge to legs with strings attached to bottom rim of shade.

### Lamp wattage:

Maximum: 75 watts  
Recommended: 60 watts

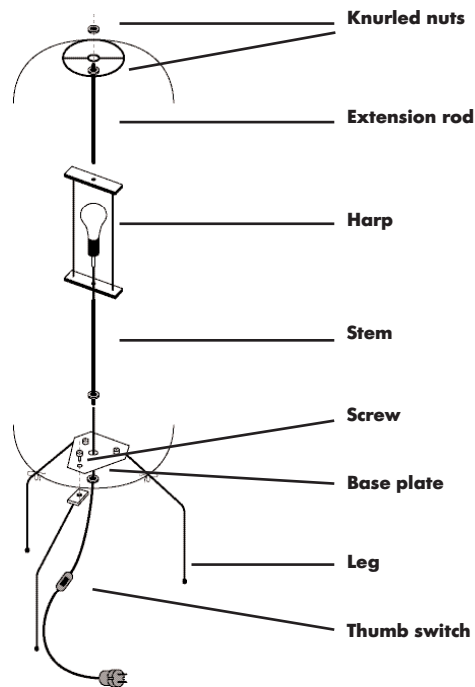

## Model: Ceiling

- 1 Safety Instructions: Switch off the power supply before installing or servicing. When connecting to the mains, please observe the regulations/guidelines of the respective country. We recommend getting lamp installed by electrician.
- 2 Slide cord-grip into position on drop-cord such that when stretcher is attached and the shade installed, the lamp will be centered in shade. Fasten cord-grip firmly by hand - please do not use tools to tighten the cord-grip.
- 3 Attach stretcher to drop-cord by snapping loop on stretcher into groove in cord-grip.
- 4 Install shade by pulling and extending over stretcher. Insert stretcher points into corresponding loops on top shade ring.

### Lamp wattage:

Maximum: 75 watts  
Recommended: 60 watts

